

BRUKERINFORMASJON FOR PIPEVERKTØY OG MOMENTVERKTØY



Monter pipen til skrallen / forlengeren / universalleddet / T-håndtaket. Settskruen på pipen skal strammes mot det gule forsenkede område på firkanten, slik at sperrekulen / tappen kommer på motsatt side.



Stram til settskruen for ekstra sikring. Bruk umbrakonøkkel med T-håndtak eller umbrakosett for riktig tilstramming.

Før og under bruk:


Kontroller at settskruen er strammet godt til slik at best mulig feste er oppnådd.

Vær oppmerksom på at ved hver tilførte del på et skrallevertøy så vil også verktøyets totale vekt øke. Økt vekt vil medføre større potensiell fallenergi.

Ved sikring av pipeverktøy må alle delene være kompatible med hverandre (se illustrasjonsbildene) slik at 2-punkts sikring oppnås (sperrekulen og settskruen).

NB! Etter en tids bruk kan settskruen bli ”sløv” i spissen og bør derfor skiftes ut med en ny. Bruk kun settkrue av herdet stål.


Vedrørende fallsikring av selve pipeverktøyet (skrallen, etc.) vises det til informasjonsbladet om generell sikkerhetsinformasjon for verktøy med påmontert sikringsløsning.

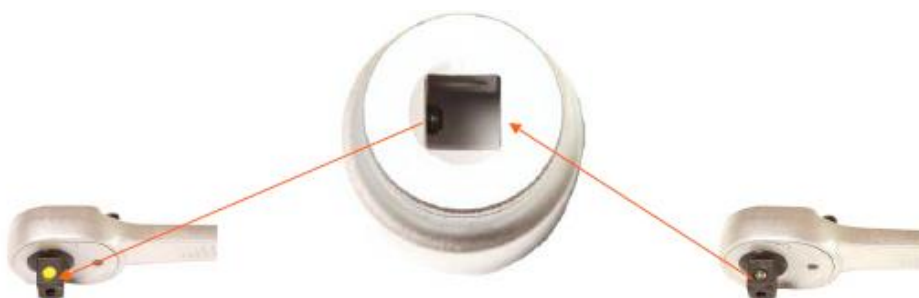

Settskrue mot forsenket felt merket gult.

Sperretapp mot innfrest spor på motsatt side av settskruen.

Maksimalt tillatt fallhøyde for pipeverktøy og momentverktøy = 1m
Fallhøyde = verktøy i fritt fall før rykk / oppbremsing.

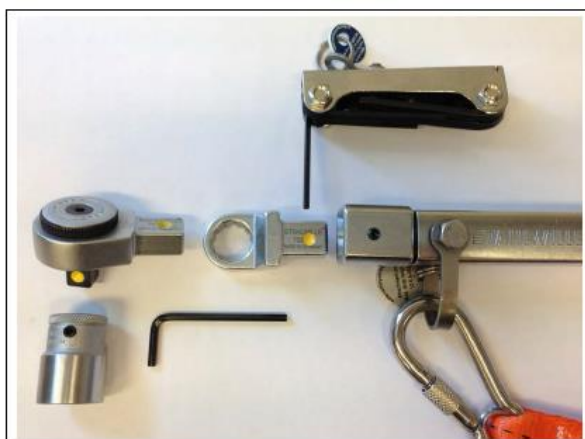

Monter innsatsverktøyet som skal brukes sammen med momentnøkkelen. Settskruen på momentnøkkelen skal strammes til for å sikre at innsatsen (skrallehode / innsats ring eller fastnøkkel) ikke kan falle av. Skru settskruen mot den gule fordypningen i innsatsverktøyet.

Ved bruk av pipe og skrallehode skal pipen sikres til skrallen ved å stramme settskruen mot fordypningen i firkanten på skrallehodet (fordypning er merket gult).

NB! etter en tids bruk kan settskruen bli ”sløv” i spissen og bør derfor skiftes ut med en ny av samme type. Bruk kun settskrue av herdet stål.

Før og under bruk:

Kontroller at settskruen er strammet slik at best mulig feste er oppnådd.

Vær oppmerksom på at ved hver tilførte del på et momentverktøy så vil også verktøyets totale vekt øke. Økt vekt vil medføre større potensiell droppenergi.

Ved sikring av pipeverktøy og innsatser må alle delene være kompatible med hverandre (se illustrasjonsbildene) slik at 2-punkts sikring oppnås (sperrekulen og settskruen).

Vedrørende fallsikring av selve momentverktøyet vises det til informasjonsbladet om generell sikkerhetsinformasjon for verktøy med påmontert sikringsløsning.

Maksimalt tillatt fallhøyde for pipeverktøy og momentverktøy = 1m
Fallhøyde = verktøy i fritt fall før rykk / oppbremsing.



USER GUIDE SOCKETS, RATCHET AND TORQUE WRENCHES



Attach the socket to the ratchet / extension / universal joint / T-handle. The set screw on the socket must be tightened against the yellow indented area on the square part so that the ball detent is facing the opposite direction.



Tighten the set screw for additional securing. Use an Allen key with a T-handle or an Allen key set for correct tightening.

Before and during use


Make sure the set screw is tightened correctly for best possible attachment.

Be aware that the total weight of the tool increases with each part that it added. Increased weight will lead to a higher potential falling force.

It is important that all components are compatible when securing a socket sets (see illustration) so that it is secured at 2 points (ball locking device and set screw)

Note! After some time the set screw will become "blunt" and should be replaced with a new one. Use only hardened steel set screws.


For information regarding securing the socket set for work at height, please refer to the general safety information leaflet for tools with attached securing solutions

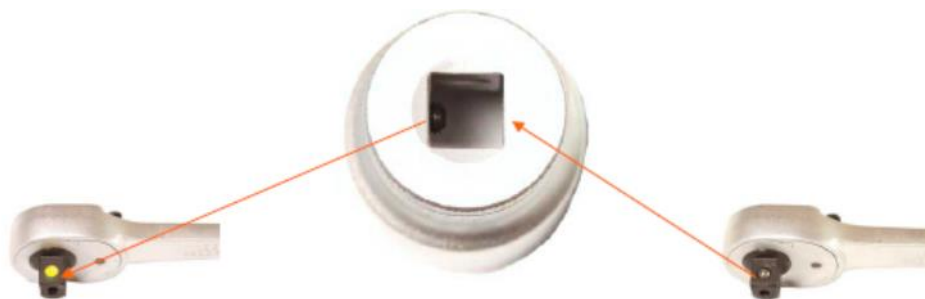

Set screw facing yellow indented area

Ball detent facing the groove on the opposite side of the set screw

Maximum allowable drop height for socket tools and torque wrenches = 1 m
Drop height = Tool in free fall before shockloading / deceleration

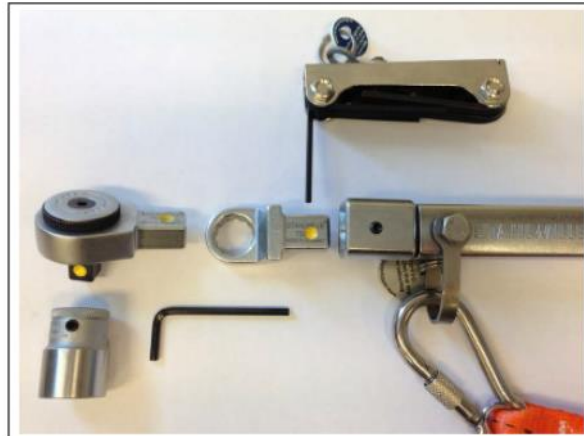

Attach the head that is to be used with the torque wrench. Tighten the set screw on the torque wrench to make sure the head (ratchet, box wrench or spanner) does not come off. Tighten the set screw against the yellow indentation on the head.

When using sockets and a ratchet head, the socket must be secured to the ratchet by tightening the set screw against the indentation on the square part of the ratchet head (the indentation is marked yellow).

Note! After some time the set screw will become "blunt" and should be replaced with a new one. Use only hardened steel set screws.

Before and during use:

Make sure the set screw is tightened correctly for best possible attachment.

Be aware that the total weight of the tool increases with each part that it added. Increased weight will lead to a higher potential falling force.

It is important that all components are compatible when securing socket sets (see illustration) so that it is secured at 2 points (ball locking device and set screw).

For information regarding securing the torque wrench for work at height, please refer to the general safety information leaflet for tools with attached securing solutions.

Maximum allowable drop height for socket tools and torque wrenches = 1 m
Drop height = Tool in free fall before shockloading / deceleration